www.blaupunkt.com

Uhrenradio mit iPod/iPhone Dock

iClock 10

www.blaupunkt.com

Bedienungsanleitung
Instruction Manual

BLAUPUNKT

SAFETY INFORMATION

INSTRUCTION

Thanks a lot for choosing our new generation of multi-functional mini music station.

This mini music station is designed with multi function, perfect sound, high liability and exquisite appearance, which brings you super happy when enjoy your music with it.

Please refer to the belows to learn more about iClock 10：

- IPHONE/IPOD play
- Incoming call alert function
- Time synchronization function between main unit and iPhone/iPod
- AUX external input
- FM radio（87.5-108MHz）
- Clock
- Alarm Clock
- Sleep
- Snooze

1. All the safety and operating instructions should be read before the product is operated.
2. Retain Instructions - The safety and operating instructions should be retained for future reference.
3. All warnings on the product and in the operating instructions should be adhered to.
4. All operating and use instructions should be followed.

Important Notes

This safety and operating instruction should be retained for future reference.

The apparatus should not be exposed to dripping or splashing or placed in a humid atmosphere such as a bathroom.

Do not install the product in the following areas:

- Places exposed to direct sunlight or close to radiators
- On top of other stereo equipment that radiate too much heat
- Blocking ventilation or in a dusty area
- Areas where there is constant vibration
- Humid or moist places.

Do not place near candles or other naked flames

Operate the product only as instructed in this manual

Before turning on the power for the first time, make sure the power adaptor is properly connected.

For safety reasons, do not remove any covers or attempt to gain access to the inside of the product. Refer any servicing to qualified personnel.

Do not attempt to remove any screws, or open the casing of the unit; there are no user serviceable parts inside, refer all servicing to qualified service personnel.

CE Declaration of conformity

CE Hereby, Blaupunkt Competence Center Audio M3 Electronic GmbH, declares that this product is in compliance with the essential reqirement and other relevant provisions of Directive 1999/5/EC. You can consulted at www.blaupunkt.com.

Safety instruction

1. READ INSTRUCTIONS – All the safety and operating instructions should be read before appliance s operated.
2. RETAIN INSTRUCTIONS - The safety and operating instructions should be retained for future reference.
3. HEED WARNINGS – All warnings on the appliance and in the operating instructions should be adhered to.
4. FOLLOW INSTRUCTIONS – All operating instructions should be followed.
5. WATER AND MOISTURE – The appliance should not be used near water, for example, near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in web basement.
6. VENTILATION – The appliance should be situated so that its location or position does not interfere with its proper ventilation. Do not place on bed, sofa, rug or similar surface that may block the ventilation openings, in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
7. HEAT – The appliance should be situated away from heat sources such as radiators, stoves, or other appliances (including amplifiers) that produce heat.
8. POWER SOURCE – the appliance should be connected to power supply only of the type described in the operating instructions or as marked on the appliance.
9. POWER CORD PROTECTION – power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them.
10. POWER LINES – an outdoor antenna should be located away from power lines.
11. OBJECT AND LIQUID ENTRY – care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
12. ESD WARNING – the display does not function properly or not reaction to operation of any the control may due to the electrostatic discharge. Switch off and unplug the set. Reconnect after a few seconds.

13. DAMAGE REQUIRING SERVICE – the appliance should be serviced by qualified service personal when:

    a. the power-supply cord or plug has been damaged.

    b. Objects have fallen into, or liquid has been spilled into the appliance enclosure.

    c. The appliance has been exposed to rain.

    d. The appliance has been dropped, or the enclosure damaged.

    e. The appliance does not appear to operate normally.

14. SERVICING – the user should not attempt to service the appliance beyond that described in the user operation instructions. All other servicing should be referred to qualified service personnel.

15. DO ensure that all electrical connections (including the mains plug, extension leads and inter-connections between the pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and unplug the power before making or changing connections.

16. Unplug this apparatus during lightning storms or when unused for long periods of time.

17. Never unplug your radio by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.

18. DON'T remove any fixed cover as this may expose dangerous voltages.

19. DON'T place hot objects or naked flame sources such as lighted candles or nightlights on, or close to equipment. High temperatures can melt plastic and lead to fires.

20. DON'T leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation. Switch off using the switch on the equipment and make sure that your family knows how to do this. Special arrangements may need to be made for infirm or handicapped people.

21. DON'T continue to operate the equipment if you are in any doubt about if it's working normally or if it's damaged in any way. Switch it off, unplug the mains power and consult your dealer.

22. REPAIR OR REPLACE all electric service cords that have become frayed or otherwise damaged immediately. Do not use a cord that shows cracks or abrasion damage along its length, the plug, or the connector end.

CATALOGUE

Interface Information 2
General Operation.....3
Play Music.....4
Radio Operation 5
Setting.....5
Specifications.....7

Packing content:

1 main unit
1 user manul
1 quick start guide
2 warranty card
1 power adaptor

INTERFACE INFORMATION

Back view

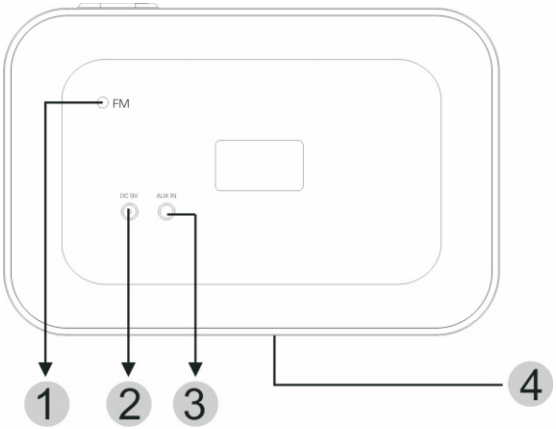

1	FM ANT: FM antenna
2	DC 5V: DC input slot
3	AUX : External music source input (3.5mm jack)

Front view

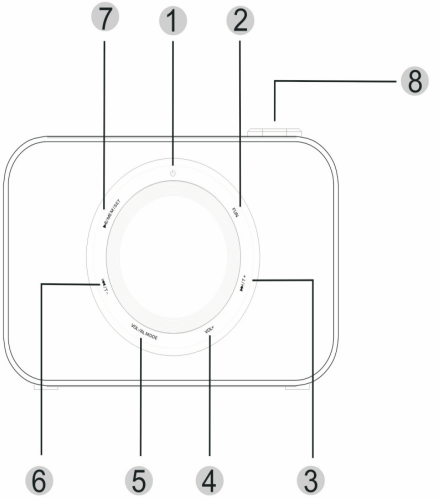

1 ⏻ : Power On/Off
2 FUN: Function mode switch
3 ⏭/T+: Search +/ Next/Forward
4 VOL+: Volume up
5 VOL-/AL MODE: Volume down /Alarm mode
6 ⏮/T-: Search-/Last/Backward
7 ⏯/MEM/SET: Play and pause/Memory/Clock setting
8 SNOOZE/SLEEP/dimmer: Alarm snooze/Sleep selecting/LCD brightness adjustment

GENERAL OPERATION

Power On

1. After plugging DC5V AC adapter into DC power input jack at the back of the unit, then the display screen lightens, clock appears on the screen, then click press " "to power on.

2. Volume: VOL- and VOL+ can be adjusted within 00-20.

Play music

IPHONE: The music station will enter to "IPHONE" function directly when power on. Dock IPHONE/IPOD on the iPhone/iPod dock, and play the music from IPHONE/IPOD. (IPOD/IPHONE can be changed when the main unit connects to power)

Pause: Under "IPHONE/IPOD" mode, press "⏯"for pause. (Note: there is no " ⏯ "on the IP19 LCD when "IPHONE/IPOD"is played or paused, but on the IPHONE/IPOD itself).

Music selection: Press " ⏮ /T- / ⏭ /T+"for music selection when "IPHONE/IPOD"is played or paused.

Rewind/Forward : Press " ⏮ /T- / ⏭ /T+"and hold it for rewind or forward when "IPHONE/IPOD"is played or paused.

IPHONE Incoming call alert: If IPHONE plays music, a call is incoming, the unit will auto switch, stop playing music and switching into call music, when auto hang up, it will return to music playing.

Time synchronization function between the main unit and iPhone/iPod:

Under the state of power-on or power-off, plug iPhone/iPod, the main unit can synchronize the current time on iPhone/iPod.

LINE operation: Select AUX under power on,and input the external music source to AUX,turn on volume and the music is ready.

Radio operation

Manual Tuner or Automatic Tuner: Press "|◀◀/T- / ▶▶|/T+" for manual tuner, while press "|◀◀/T- / ▶▶|/T+" and hold it for two seconds when enter to automatic tuner. The tuner will stop automatically when get access to channels.

Manual channel memory: when get acess to the channels by manual, press "▶||/MEM/SET" and hold for a while. Press "|◀◀/T- / ▶▶|/T+" to choose the saving location. 20 channles can be memorized and saved.

Memory selection: Press "▶||/MEM/SET" to alternate the memory channel.

Timing setting

1. Hold and press "▶||/MEM/SET" key around 2 seconds, "24H" characters are flashing on LCD screen, enter into 12/24H system option, then click press "|◀◀/T- / ▶▶|/T+" key to select "12/24" system, finally click press "▶||/MEM/SET" key to confirm, which enters into time setting.
2. Enter into the time setting mode, set the hour first, click press "|◀◀/T- / ▶▶|/T+" key to select preset hour, finally click press "▶||/MEM/SET" key to confirm, then use the same methods to set the minutes.

Alarm clock setting

When it's in STAND By status, hold and press "VOL-/AL MODE" key to enter into setting, then display clock, "Hour" digits are flashing on LCD, and click press "|◀◀/T- / ▶▶|/T+" key to adjust the hour, click press "VOL-/AL MODE" key to confirm, then "Minute" digits are flashing on LCD, and click press "|◀◀/T- / ▶▶|/T+" key to adjust the minutes, click press "VOL-/AL MODE" key to confirm the setting and return to clock status.

Snooze/sleep/dimmer

After alarm clock rings, press "SNOOZE" key to start snooze function,the alam clock stops,and it will resume after 9 minutes, if you press " ⏻ " key, the alarm clock stops, it will not ring again until the same time of the next day.(For example, we set the alarm clock's time "9:05" today, if you press " ⏻ " key, the alarm clock will stop temporarily, and ring again till "9:05" tomorrow.

Sleep:Press "SNOOZE/SLEEP/LIGHT" under any mode and then start to set the snooze and select 120M-90M-60M-30M-15M-OFF.

dimmer: There are three brightness modes of LCD when the unit is in stand-by.

SPECIFICATION

Support play iPhone (Compatible with most iPods)

iPod Mini 4GB 6GB	iPod Touch 1st Generation 8GB 16GB 32GB
iPod 4th Generation 20GB 60GB	iPod Touch 2nd Generation 8GB 16GB 32GB
iPod Classic 80GB	iPod Touch 3rd Generation 8GB 16GB 32GB
iPod Nano 2nd Generation 1GB 2GB 4GB	iPod Touch 4th Generation 8GB 16GB 32GB
iPod Nano 6th Generation 8GB 16GB	iPhone 3G 8GB 16GB
iPod Nano 1st Generation 1GB 2GB 4GB	iPhone 4 16GB 32GB
iPod Nano 5th Generation(Video Camera) 8GB 16GB	iPod Nano 3rd Generation(Video) 8GB 16GB
iPod 5th Generation(Video) 30GB 60GB 80GB	iPod Classic 120GB 160GB(2009)
iPod 4th Generation(Colour Display) 40GB 60GB	iPhone 3GS 8GB 16GB 32GB
iPod Nano 4th Generation(Video) 4GB 8GB	iPod Classic 160GB(2007)

S/N Ratio	⩾60dB
Max. distortion	⩽10%
Output power (8Ω)	⩾1.2W
Power supply input	DC 5V
FM sensitivity	⩽20dB

iPod / iPhone

"Made for iPod," and "Made for iPhone," mean that an electronic accessory has been designed to connect specifically to iPod or iPhone respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

iPhone & iPod are trademarks of Apple Inc., registered in the U.S. and other countries.

INTENDED USE

This appliance is intended for recieving and playing audio and video signals. Only use according to these instructions. Improper use is dangerous and will void any warranty claim. Observe the safety instructions.

If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)

© 2010 ALL rights reserved by Blaupunkt Competence Center Audio M3 Electronic GmbH. This material may be reproduced, copied or distributed for personal use only.

BLAUPUNKT

Competence Center Audio
M3 Electronic GmbH
Gutenbergstrasse 5
D-65830 Kriftel-Germany
www.blaupunkt.com
Service Hotline: 0180 55 88 66 4

All rights reserved. All brand names are registered trademarks of their repective owners. Specifications are subject to change without prior notice.